


REF NO.	PARTS NO.	DESCRIPTION	QTY
01	F0060PT	Pump Housing	1
02	M0001	Oil Filter	1
03 ☆	G0102	O-Ring	2
04	E0152	Tie Rod	1
05	B0105	Reservoir	1
06 ☆	G0009	O-Ring	1
07	H0005	Air Release Screw	1
08	F0061	Tail Base	1
09 ☆	G0002	O-Ring	1
10	E0002	Nut	1
11	K0001	Steel Ball	2
12	H0003	Screw	2
13	G0116	O-Ring	1
14	G0575	Nipple	1
15 ☆	GA069	O-Ring	1
16 ☆	G0070	Back-Up Ring	1
17	E0149	Pump Piston	1
18	F0003	Yoke	1
19	E0389	Piston Pin	1
20	E0005	Yoke Pin	1
21	I0001	E-Ring	1
22	G0107	Yoke Cover	1
23	D0087	Handle	1
24	G0573	Handle Grip	1
25	K0002	Steel Ball	1
26	J0045	Inlet Ball Spring	1
27	K0003	Steel Ball	1
28	J0001	Outlet Ball Spring	1
29	J0002	Copper Washer	1
30	H0006	Valve Cover Screw	1
31	K0011	Steel Ball	1
32	E0006	Spring End Cap	1
33	J0046	H.P. Spring	1
34	E2098	Screw	1
35	H0054	Set Screw	1
36	K0036	Steel Ball	1
37 ☆	GA050	O-Ring	1
38	E2677	Release Valve Screw	1
39 ☆	G0155B	O-Ring	1
40	E2676	Release Nut	1
41	E2934	Release Knob	1
42	I0072	Spring Pin	1

HAND PUMP

P-43A

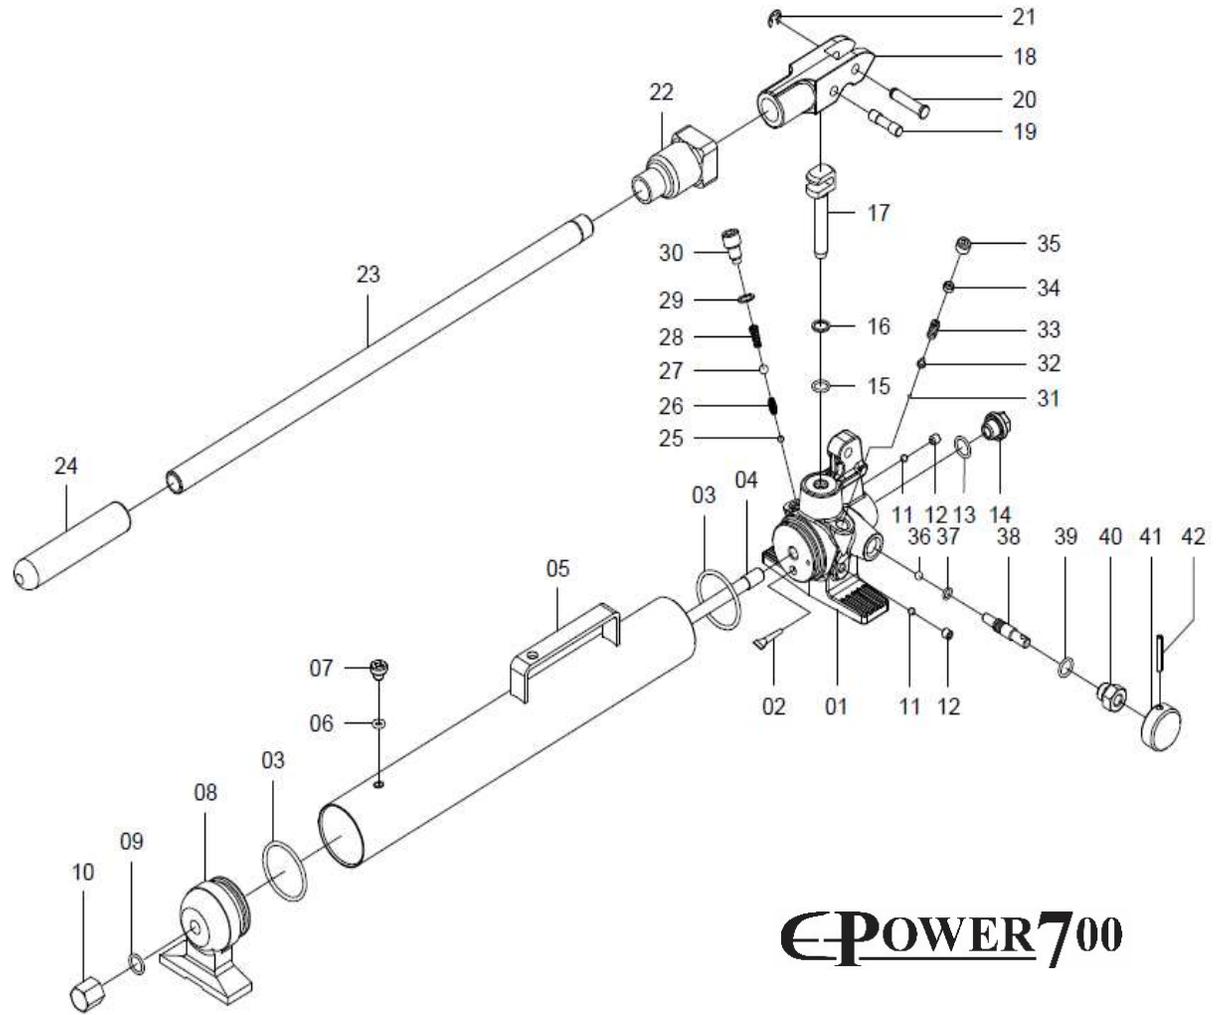

POWER700


☆ Items included in Repair kit

REF NO.	PARTS NO.	DESCRIPTION	QTY	REF NO.	PARTS NO.	DESCRIPTION	QTY
01	F0068PT	Pump Housing	1	46	K0036	Steel Ball	1
02	L0051	45° Elbow	1	47 ☆	GA050	O-Ring	1
03	M0001	Oil Filter	1	48	E2677	Release Valve Screw	1
04 ☆	G0102	O-Ring	1	49 ☆	G0155B	O-Ring	1
05	E0152	Tie Rod	1	50	E2676	Release Nut	1
06	D0090	Head Base	1	51	E2934	Release Knob	1
07 ☆	G0090	O-Ring	2	52	I0072	Spring Pin	1
08	B0106	Reservoir	1				
09 ☆	G0009	O-Ring	1				
10	H0005	Air Release Screw	1				
11	F0065	Tail Base	1				
12 ☆	G0002	O-Ring	1				
13	E0002	Nut	1				
14	K0001	Steel Ball	3				
15	H0003	Screw	3				
16	G0116	O-Ring	1				
17	G0575	Nipple	1				
18	H0131	Set Screw	1				
19 ☆	GA003	O-Ring	1				
20 ☆	G0004	Back-Up Ring	1				
21	E0153	H.P. Piston	1				
22	I0019	Snap Ring	1				
23 ☆	GA103	O-Ring	1				
24 ☆	G0106	Back-Up Ring	1				
25	E0154	L.P. Piston	1				
26	F0003	Yoke	1				
27	E0389	Piston Pin	1				
28	E0005	Yoke Pin	1				
29	I0001	E-Ring	1				
30	G0107	Yoke Cover	1				
31	D0257	Handle	1				
32	G0573	Handle Grip	1				
33	K0002	Steel Ball	2				
34	J0045	Inlet Ball Spring	2				
35	K0003	Steel Ball	2				
36	J0001	Outlet Ball Spring	2				
37	J0002	Copper Washer	2				
38	H0006	Valve Cover Screw	2				
39	K0104	Steel Ball	1				
40	J0140A	L.P. Spring	1				
41	E2098	Screw	2				
42	H0054	Set Screw	2				
43	K0004	Steel Ball	1				
44	E0006	Spring End Cap	1				
45	J0406	Spring	1				

☆ Items included in Repair kit

HAND PUMP

P-90A

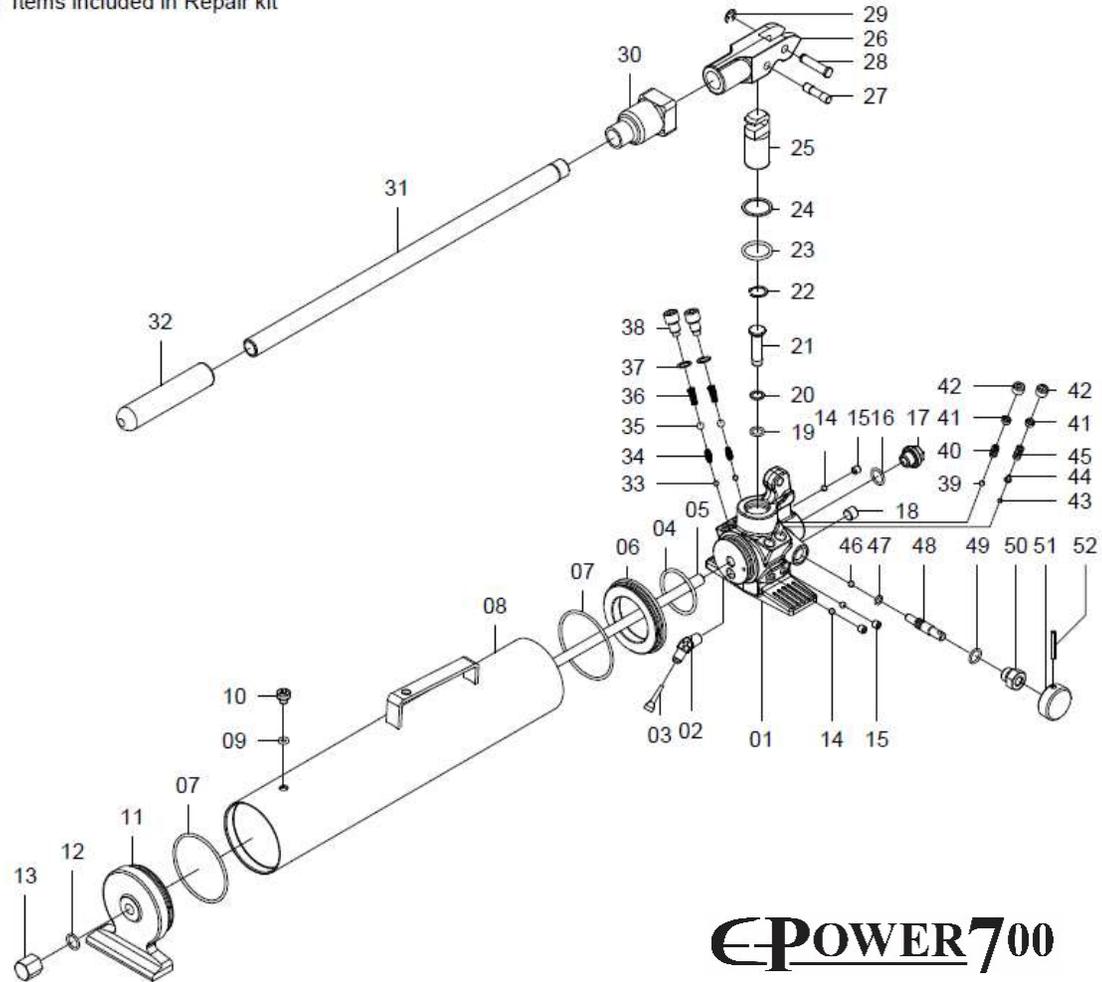


POWER700

REF NO.	PARTS NO.	DESCRIPTION	QTY	REF NO.	PARTS NO.	DESCRIPTION	QTY
01	F0068PT	Pump Housing	1	46	K0036	Steel Ball	1
02	L0051	45° Elbow	1	47 ☆	GA050	O-Ring	1
03	M0001	Oil Filter	1	48	E2677	Release Valve Screw	1
04 ☆	G0102	O-Ring	1	49 ☆	G0155B	O-Ring	1
05	E0155	Tie Rod	1	50	E2676	Release Nut	1
06	D0090	Head Base	1	51	E2934	Release Knob	1
07 ☆	G0090	O-Ring	2	52	I0072	Spring Pin	1
08	B0108	Reservoir	1	☆ Items included in Repair kit			
09 ☆	G0009	O-Ring	1				
10	H0005	Air Release Screw	1				
11	F0065	Tail Base	1				
12 ☆	G0002	O-Ring	1				
13	E0002	Nut	1				
14	K0001	Steel Ball	3				
15	H0003	Screw	3				
16	G0116	O-Ring	1				
17	G0575	Nipple	1				
18	H0131	Set Screw	1				
19 ☆	GA003	O-Ring	1				
20 ☆	G0004	Back-Up Ring	1				
21	E0153	H.P. Piston	1				
22	I0019	Snap Ring	1				
23 ☆	GA103	O-Ring	1				
24 ☆	G0106	Back-Up Ring	1				
25	E0154	L.P. Piston	1				
26	F0003	Yoke	1				
27	E0389	Piston Pin	1				
28	E0005	Yoke Pin	1				
29	I0001	E-Ring	1				
30	G0107	Yoke Cover	1				
31	D0089	Handle	1				
32	G0573	Handle Grip	1				
33	K0002	Steel Ball	2				
34	J0045	Inlet Ball Spring	2				
35	K0003	Steel Ball	2				
36	J0001	Outlet Ball Spring	2				
37	J0002	Copper Washer	2				
38	H0006	Valve Cover Screw	2				
39	K0104	Steel Ball	1				
40	J0140A	L.P. Spring	1				
41	E2098	Screw	2				
42	H0054	Set Screw	2				
43	K0004	Steel Ball	1				
44	E0006	Spring End Cap	1				
45	J0406	Spring	1				

HAND PUMP

P-122A

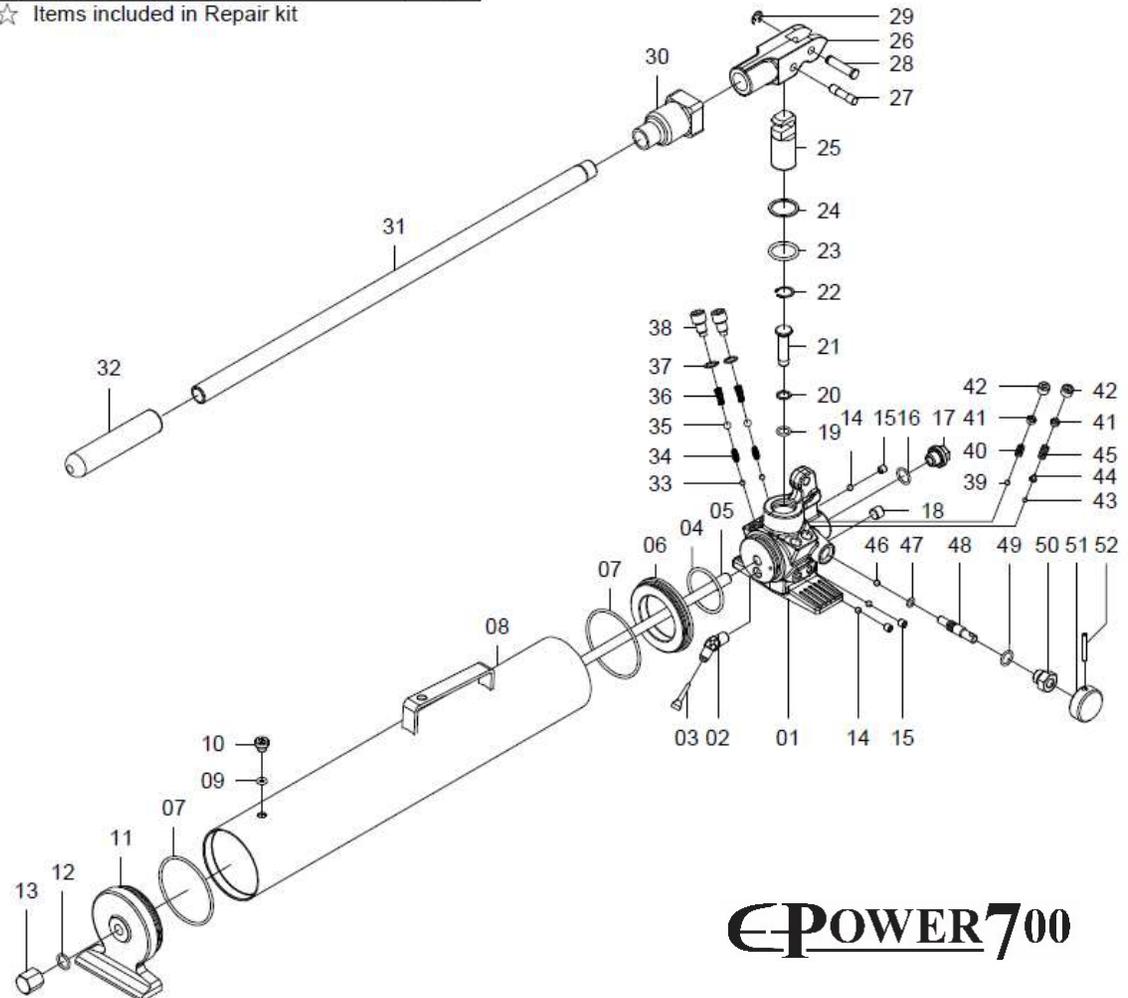

POWER700