

POS. ITEM	° N°	CMI5N25 75	CMI5N125 225	CMI10N25	CMI10N50 CMI10N100	CMI10N150 250	CMI10N300 CMI10N350	CMI25N25 CMI25N50	CMI25N100 350
--------------	---------	------------------------	--------------------------	----------	-----------------------	---------------------------	------------------------	----------------------	---------------------------

1	1			K73FC					
2	2	ZTF005	ZTF005	-	ZTF010	ZTF010	ZTF010	ZTF030	ZTF030
3	2	3001104020	3001104040F	3001106025	3001106025 (050) 3001106055F (100)	3001106055F	3001106055F	3001108030	3001108060F
* 4	2	3002404	3002404	3002406	3002406	3002406	3002406	3002408	3002408
* 5	1	-	-	300222137	300222137	300222137	300222137	30413055	30413055
* 6	1	30405030	30405030	30405045	30405045	30405045	30405045	30405065	30405065
7	1	32005226XX	32005226XX	32010226025	32010226XX	32010226XX	320102273XX	32025226XX	32025226XX
8	1	-	-	-	-	32010236XX	320102363XX	-	32025236XX
9	1	32005235XX	32005235XX	32010235025	32010235XX	-	-	32025235XX	-
10	1	-	-	-	-	32010051	32010051	-	32025051
11	1	32005147	32005147	32010047	32010147	32010147	32010147	32025147	32025147
12	1	32005251XX	32005251XX	32010251025	32010251XX	32010251XX	320102513XX	32025251XX	32025251XX
13	1	32005251	32005251	32005251	32010251	32010251	32010251	32030251	32030251
* 14	1	-	-	-	-	-	30823030	-	-
* 15	1	-	-	-	-	-	300222162	-	-
16	1	-	-	-	-	-	32010025	-	-
* 17	1	-	-	-	-	300222112	300222112	-	300223181

* KIT	MOD.	KCMI5N	KCMI5N	KCMI10N	KCMI10N	KCMI10N	KCMI10N	KCMI25N	KCMI25N
-------	------	--------	--------	---------	---------	---------	---------	---------	---------

Sostituire a XX le cifre corrispondenti alla corsa.
in relazione al modello. Es.: CORSA 025 (025 = 25 mm) per CMI10N25




Replace XX with the digits corresponding to the stroke
according to the model. Ex.: STROKE 025 (025 = 25 mm) for CMI10N25

Remplacer XX avec les chiffres correspondantes a' la course
par rapport au modele. Ex.: COURSE 025 (025 = 25 mm) pour CMI10N25

XX ersetzen durch Hub in Zoll des entsprechenden Zylindertyps.
Beispiel: HUB 025 (025 = 25mm) fuer CMI10N25

Sustituir XX por las cifras correspondientes a la carrera del
modelo. Ej: CARRERA 025 (025=25mm) para CMI10N25

Sobstituir XX com o valor do curso in relação ao modelo.
Ex. CURSO 025 (025=25mm) por CMI10N25

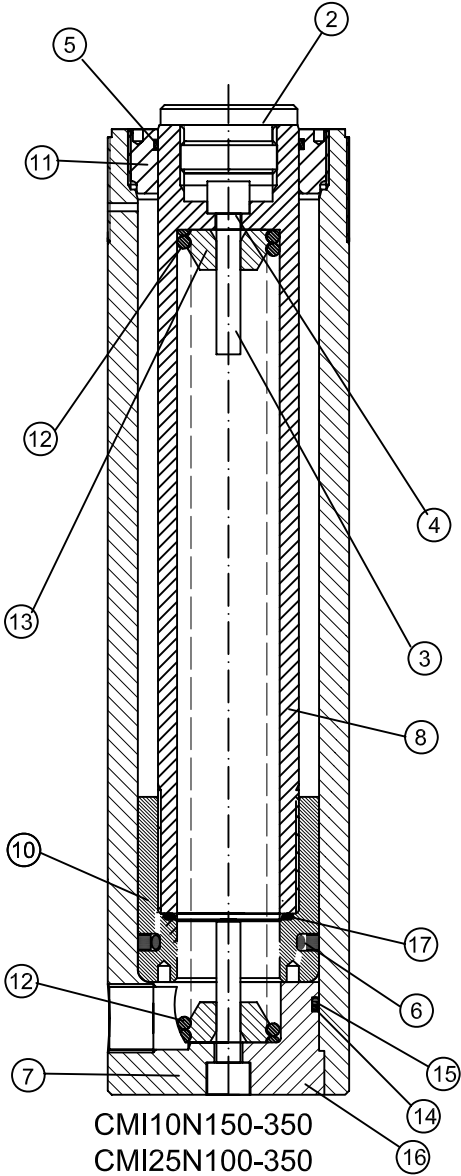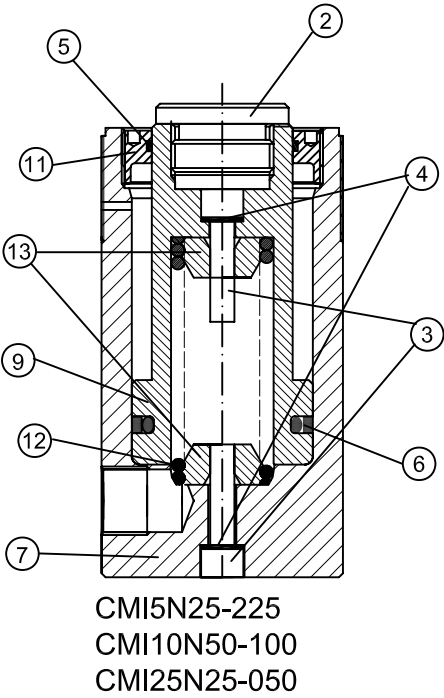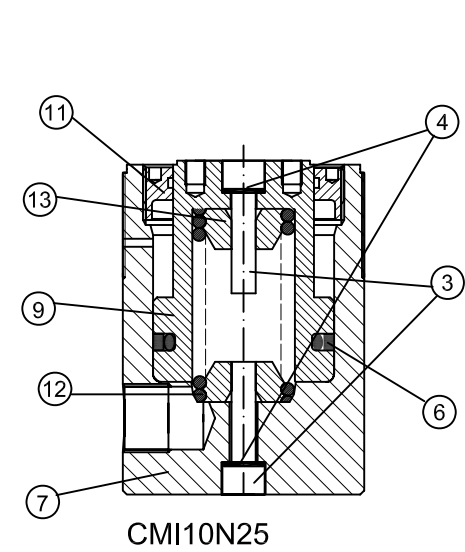

POS. ITEM	° N°	CMI30N210	CMI50NXX	CMI100N50 325
--------------	---------	-----------	----------	---------------------------

1	1	K73FC		
2	1	ZTF30	ZTF051	ZTF151
3	2	-	3001105010	3001106012
4	2	3001108060F	3001108060F	3001108060F
* 5	2	3002408	3002408	3002408
* 6	1	300223181	300224287	300224362
* 7	1	-	308234287	308234362
* 8	1	30413055	30413080	30413100
* 9	1	30405075	30405095	30405130
10	1	32030226210	32050226XX	32100226XX
11	1	32025236250	32050236XX	32100236XX
12	1	32030051	32050051	32100051
13	1	-	32050147	32100147
14	1	32030251250	32050251XX	32100251XX
15	2	32030251	32050251	32100251
16	1	-	**30152039	30152039
17	2	-	03013029	03013029
18	1	32030020	-	-
* 19	1	30823171	-	-
* 20	1	30022171	-	-

* KIT	MOD.	KCMI30N	KCMI50N	KCMI100N
-------	------	---------	---------	----------

** Il modello CMI050N050 non è dotato di maniglia

Sostituire a XX le cifre corrispondenti alla corsa.
 in relazione al modello. Es.: CORSA 050 (050 = 50 mm) per CMI100N50



Replace XX with the digits corresponding to the stroke
 according to the model. Ex.: STROKE 050 (050 = 50 mm) for CMI100N50

Remplacer XX avec les chiffres correspondantes a' la course
 par rapport au modele. Ex.: COURSE 050 (050 = 50 mm) pour CMI100N50

XX ersetzen durch Hub in zoll des entsprechenden Zylindertyps.
 Beispiel: HUB 050 (050 = 50mm) fuer CMI100N50

Sustituir XX por las cifras correspondientes a la carrera del
 modelo. Ej: CARRERA 050 (050 = 50mm) para CMI100N50

Sobstituir XX com o valor do curso In relação ao modelo.
 Ex. CURSO 050 (050 = 50mm) por CMI100N50

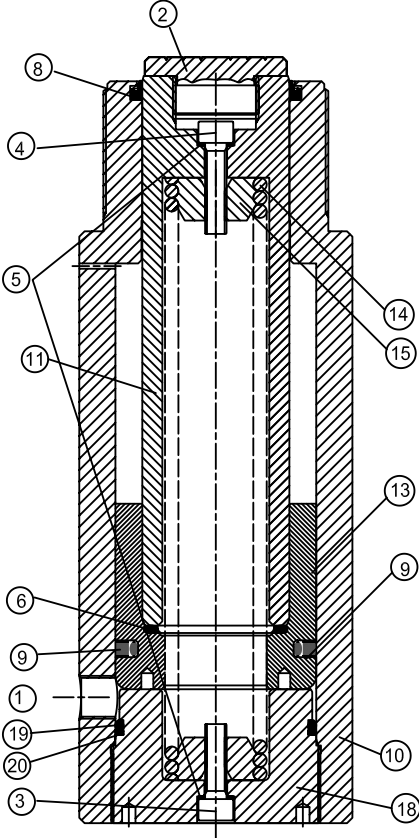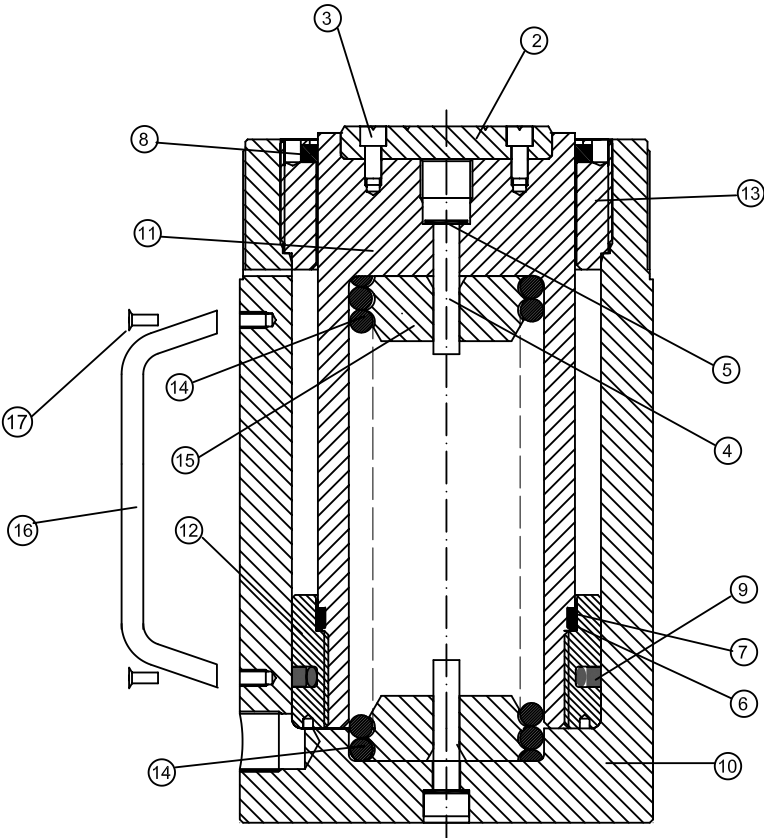

CMI030XX